

Thank you for purchasing the BlissLights Garden Accent Light. This Accent Flood Light emits a 15' X 15' projection coverage of light that can be used to decorate your garden or to create a unique holiday display. The BlissLights Garden Accent Light uses a custom diffuser to spread the light evenly. The BlissLights Garden Accent Light can be used solely or in conjunction with the BlissLight Spright Lite. Used along with the BlissLight Spright Lite creates a breathtaking display. We hope you enjoy this incredibly unique lighting fixture.

Before you Begin

Immediately upon receiving the fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that the fixture must be returned to the factory, it is important that the fixture be returned in the original factory box. Please see parts list below for box contents.

Parts List

Lamp Head w/Bracket and Cable



Transformer w/AC Plug



Ground Stake



Battery-Operatd Remote Control
(CR2025 Battery incl.)



Setting up the BlissLights Garden Accent Light

****Before operating your Blisslights Garden Accent Light, please read the “Before You Begin” section and “Notice” section of this user guide. ****

First locate the 2 prong plug connected to the cable exiting the BlissLights Garden Accent Light head. Plug the two prong connector into the matching holes on the end of the 12V Manufacturer provided transformer. Screw the cap on to complete the water tight seal.

Next, plug the standard US plug on the other end of the transformer into an outdoor outlet.

To attach or detach the stake, twist the stake into place on the bottom of the flood light. Twisting the stake clockwise will tighten the stake into place. Twisting the stake counter clockwise will detach the stake. Insert the BlissLights Garden Accent Light into the desired location. Do not use fixture head to insert light into the ground, grasp by stake only. Use the bracket attached to the fixture head to angle the fixture either up or down until the desired projection is found.

Garden Accent Light Remote Instructions

The Garden Accent Light Remote allows you to control the color, intensity and mode of each fixture. Plug in the BlissLights Garden Accent Light to the manufacture provided transformer. Point the front of the remote into the glass lens of the BlissLights Garden Accent Light. For best usage, hold remote 1-4 feet from the glass lens. Press the button of the option you would like to select. See the Garden Accent Light Remote Diagram for button descriptions.

Operating the BlissLight

The BlissLights Garden Accent Light operates in temperatures of -15o F to 90o F. There may be a slight delay if operating in temperatures below 55 o F. Please allow up to 10 minutes for light to warm up and reach its full projection.

Installation Tips:

- **Use with manufacturer provided transformer only.**
- The darker the area the light is being used in, the brighter the projection. Try to stay away from areas with street lights or other bright lights.
- If the BlissLights Garden Accent Light is used with the BlissLights Spright Lite, it will enhance the projection and add color.

Product Specifications

	BlissLights Flood Light
LED Colors	RGB
Power Consumption	Up to 10 watts
Power Input	110/120V
Operation	Indoor / Outdoor
Operating Temperature	-15° F to 90° F
Projection Coverage	15ft X 15ft
Maintenance	Maintenance Free
Dimensions	3.75"L X 3"W X 12.5"H
Warranty	Limited 1 Year

LIMITED WARRANTY

The manufacturer warrants this product to be free from defects in materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including any labor/expense costs involved in the replacement or repair of said product. Please contact BlissLights at warranty@blisslights.com, or (626) 709- 3319.

BlissLights Garden Accent Light

User's Guide



Manufactured By:



Phone: (626) 709-3319
Fax: (626) 205- 4013
info@blisslights.com

**Please ONLY use
manufacturer
provided
transformer.**